


PARAPET WITH PARAGUARD COPING AND TORCH-APPLIED FLASHING

TERANAP - PARAGREEN XF PRE-GROWN VEGETATED MAT SYSTEM

CONCRETE SUBSTRATE

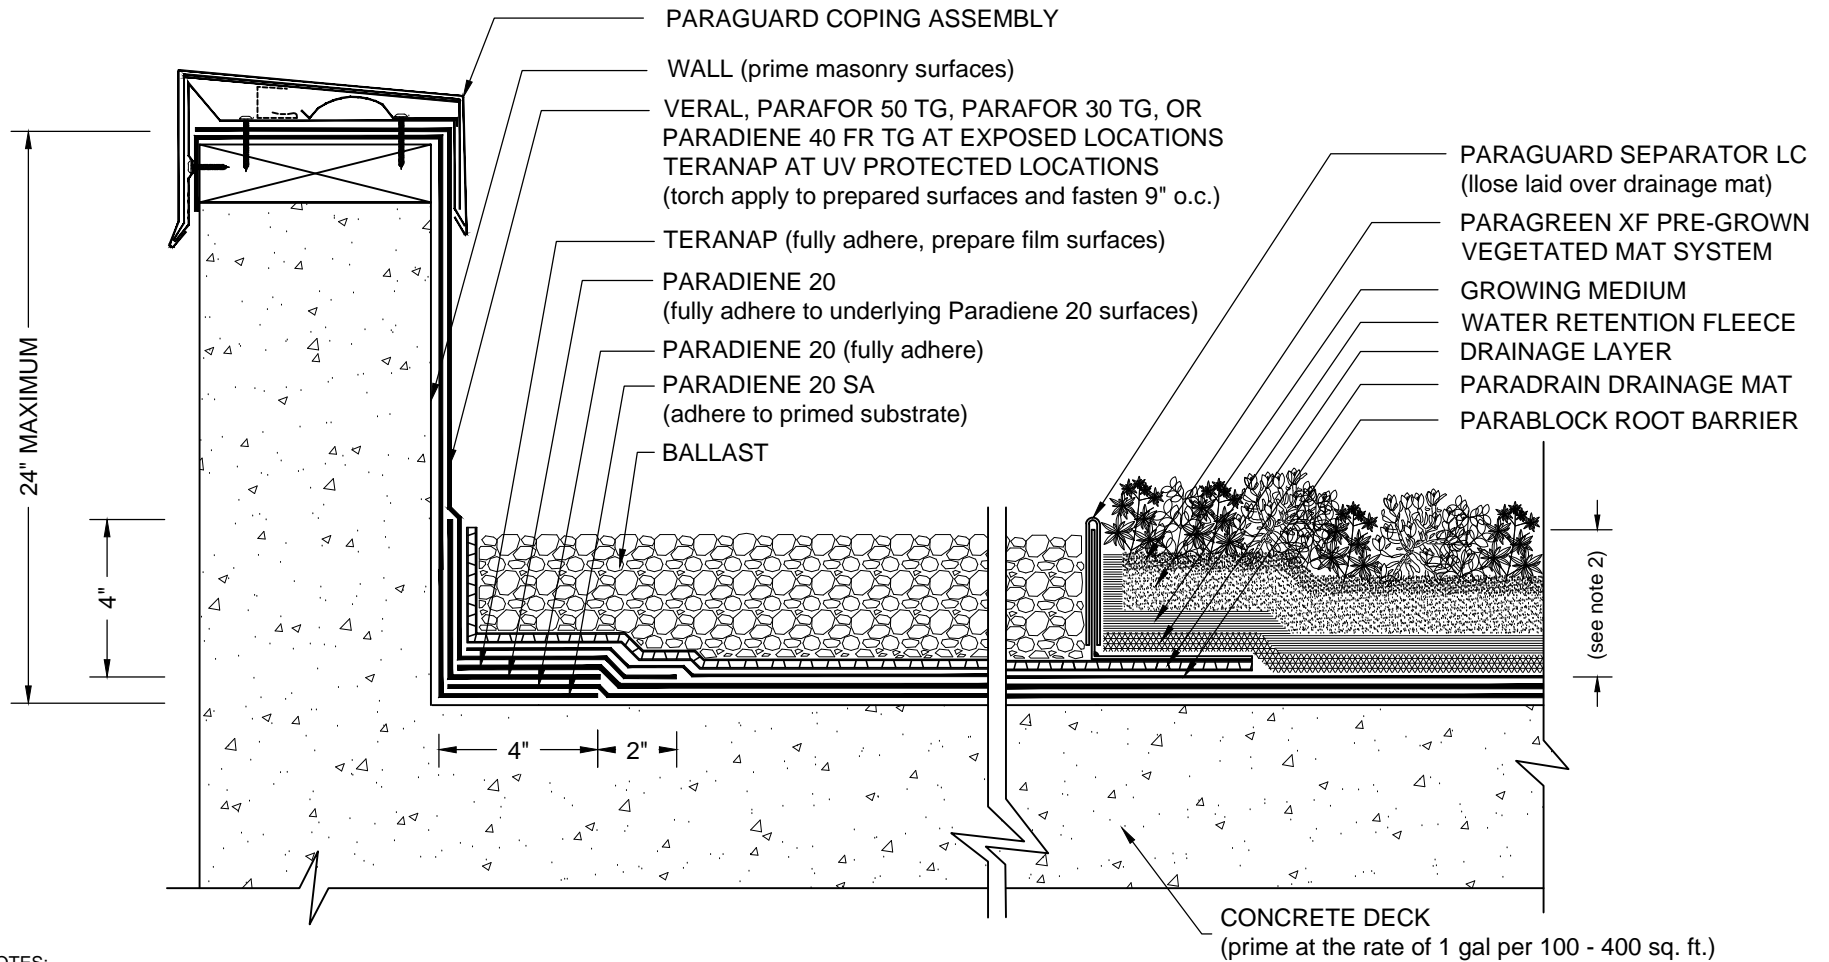

- NOTES:
- WHERE PRIMER IS INDICATED PA-1125, PA-917 LS, OR TA-119 PRIMER ARE REQUIRED TO MAINTAIN PROPER ADHESION. TA-119 IS REQUIRED FOR ALL PARADIENE 20 SA FLASHING REINFORCING AND STRIPPING PLY APPLICATIONS. CONTACT SIPLAST FOR SPECIFIC REQUIREMENTS.
 - THE VEGETATED ROOF ASSEMBLY AND BALLAST ARE SHOWN FOR REFERENCE PURPOSES ONLY. THE DIMENSIONS OF THE BALLASTED AREAS WILL VARY ACCORDING TO SPECIFIC BUILDING DIMENSIONS, CURRENT INSULATION, GROWING MEDIUM, PRE-VEGETATED MAT, PERIMETER COMPONENTS, IRRIGATION, AND MAINTENANCE GUIDELINES.
 - REFER TO THE PARAGUARD ROOF PERIMETER SYSTEM INSTALLER'S GUIDE FOR INFORMATION ON PRODUCTS, SIZING AND INSTALLATION OF THE PARAGUARD SYSTEM.
 - THE CARPENTRY AND METAL WORK SHOWN DEPICTS SHOP FABRICATION AND JOB-SITE ASSEMBLY. THESE COMPONENTS SHOULD BE DESIGNED/FABRICATED/INSTALLED ACCORDING TO GENERALLY ACCEPTED INDUSTRY PRACTICES, STANDARDS, AND APPROVALS.
 - DISSIMILAR METAL TYPES SUBJECT TO ELECTROLYTIC REACTION SHOULD BE PHYSICALLY SEPARATED.
 - REQUIREMENTS AND RECOMMENDATIONS DETAILED IN CURRENT SIPLAST SPECIFICATIONS SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

CAUTION: SIPLAST RECOMMENDS THAT ALL PRACTICES PERTAINING TO NRCA CERTA GUIDELINES BE FOLLOWED WHEN TORCHING METHODS ARE EMPLOYED. THIS INCLUDES PERFORMING A FIRE WATCH FOLLOWING ANY TORCH APPLICATIONS. ALWAYS HAVE APPROVED FIRE-EXTINGUISHING EQUIPMENT NEARBY.

N.T.S